

 






Metronome instructions

1. To turn on, press the rightmost large button with the line and left-pointing triangle. “ ◀”. You need to press and hold until the screen appears.
2. Press the downward or upward pointing triangle “ or ” to set the pace to 96 bpm.
3. Press the “~” button until the circles/lines that appear on the screen look like this: I O O O O I
4. Press the music note button until the arrow that appears on the bottom of the screen points to the leftmost music note “” (quarter note).
5. Press the rightmost large button with the line and left-pointing triangle “ ◀” once to turn on the sound. The volume control dial is on the side of the metronome.
6. To mute the sound, press the rightmost large button with the line and left-pointing triangle “ ◀” again.
7. To turn off, press and hold the rightmost large button with the line and left-pointing triangle. “ ◀” until the screen disappears.